TOCH

MOBILE

Angel II

1 About Data Storage And Operation…… 4
2 Considerations and Safety…… 4
3 Keys, Phone Appearance and Illustrated Icons…… 7
3.1 External view…… 7
3.2 Buttons / Keys Illustrations……7
4. Icons On Screen ……12
5 Install And Remove The Sim Card…….…… 15
6 Battery And Charger…….…. 17
6.1 Battery…… 17
6.2 Charger…… 18
7 Installing Of A Microsd Memory Card ……20
8 Getting Started……23
8.1 Turning the phone on and off ……23
8.2 Making and Receiving Calls…… 23
8.2.1 Make call with keypad…… 24
8.2.2 Call from the phonebook…… 24
8.2.3 Dial from recent calls…… 25
8.2.4 Receiving calls……... 25
8.3 Run SOS function…….. 25
8.4 Multimedia Configuration…… 26
8.5 Use FM radio…… 30
8.6 Enable / Disable Music Player…… 30
8.7 Keypad Lock and Unlock…… 32
8.8 Writing Text Message (SMS)…….. 32
8.9 Text messages and multimedia messages……34
8.10 Delete text messages…… 34
8.11 Configure SOS…… 35

8.12 Disable / Enable reading incoming call number and pronunciation of numbers when you press the keypad…….. 37
8.12.1 Disable / Enable reading incoming call number……. 37
8.12.2 Pronunciation of numbers when you press the keypad……. 37
8.13 **Taking pictures……** 39
8.14 **View Photos…….** 40
8.15 **Record Videos……** 41
8.16 **View Videos……** 42
8.17 **Set Date and Time……** 44
8.18 **Change SIM PIN……** 45
8.19 **Access Calculator……** 46
8.20 **View Calendar and schedule events……** 47
8.21 **Set Alarm……..** 47
8.22 **Write Multimedia Message……..** 48
8.23 **Set send and receive Multimedia Messages (MMS)……** 50
9 **Problem Solving……..** 53
9.1 **The mobile phone requests the "PIN code" when turned on……** 53
9.2. **The phone requests "Insert SIM card"……**53
9.3 **The mobile phone asks "Please enter the lock code**" ……..53
9.4 **No Network……..** ….53
9.5 **I cannot hear others but everybody else can hear me……** 54
10 **Phone does not recognize my MicroSD card or cannot read music, pictures or video stored on my MicroSD card……** 54

10.1 **The phone does not turn on……** 55
10.2 **SOS function is not activated……** 55
11 **Quick Troubleshooting Guide……** 56

1 About Data Storage and Operation

The area of internal phone storage and external storage media such as MicroSD cards that eventually might be included with this device, are empty (excluding own internal device information for standard operation), which means it does not contain any pictures, music or videos, Internet application or data from those applications.

TOCH Mobile shall not be responsible for the data that the phone user reads, writes, modifies or deletes in the phone storage areas. These data will be sole responsibility of the phone user.

2 Considerations and safety

In order to use your phone safely and effectively, please read this information before using it:

• Next to a chemical plant, a gas station, oil depot or other explosive points, please address the recommendations of these places on the use of cell phones. As a recommendation, please turn off the phone.

• When you are driving, please do not use the phone. If necessary, first park the vehicle before using the phone.

• Do not use the phone in a hospital in order to not disrupt the operation of medical equipment, especially cardiac pacemakers, hearing aids and medical electronics. Please obey the rules and regulations of the hospital before using the phone.

• Before flying, turn off the phone as to not affect the operation of the aircraft. Using the phone in an aircraft may be dangerous. Please address the recommendations of the crew about it.
• Telephone usage by children should be supervised by adults.
• Accessories and battery: Please use the battery and accessories supplied by our company. Otherwise, you risk damaging your phone beyond repair. Please do not open or destroy the battery. If the battery is too hot, discolored, swollen, sweats or exhibits an unusual phenomenon, please stop using it immediately and replace it to avoid affecting your safety. Please take it to an electronic devices recycling place, and do not discard it in the everyday trash. **Attention**: Please do not charge more than 12 hours.
• Do not charge without battery . When the battery is removed, turn off in order not to damage the phone.
• Your phone is not water resistant. Please keep it dry.
• Avoid using your phone if you feel it is too hot or too cold.
• Do not throw, drop or hit the phone so as to not destroy it.
• According to the FCC certification obtained by this device, it must be used at a distance of 1.5 cm from the human body.
• Authorized Service: only seek maintenance of your phone through authorized service centers for TOCH

Mobile. Please do not disassemble the phone yourself.

3 Keys, phone appearance and illustrated icons.
3.1 External View

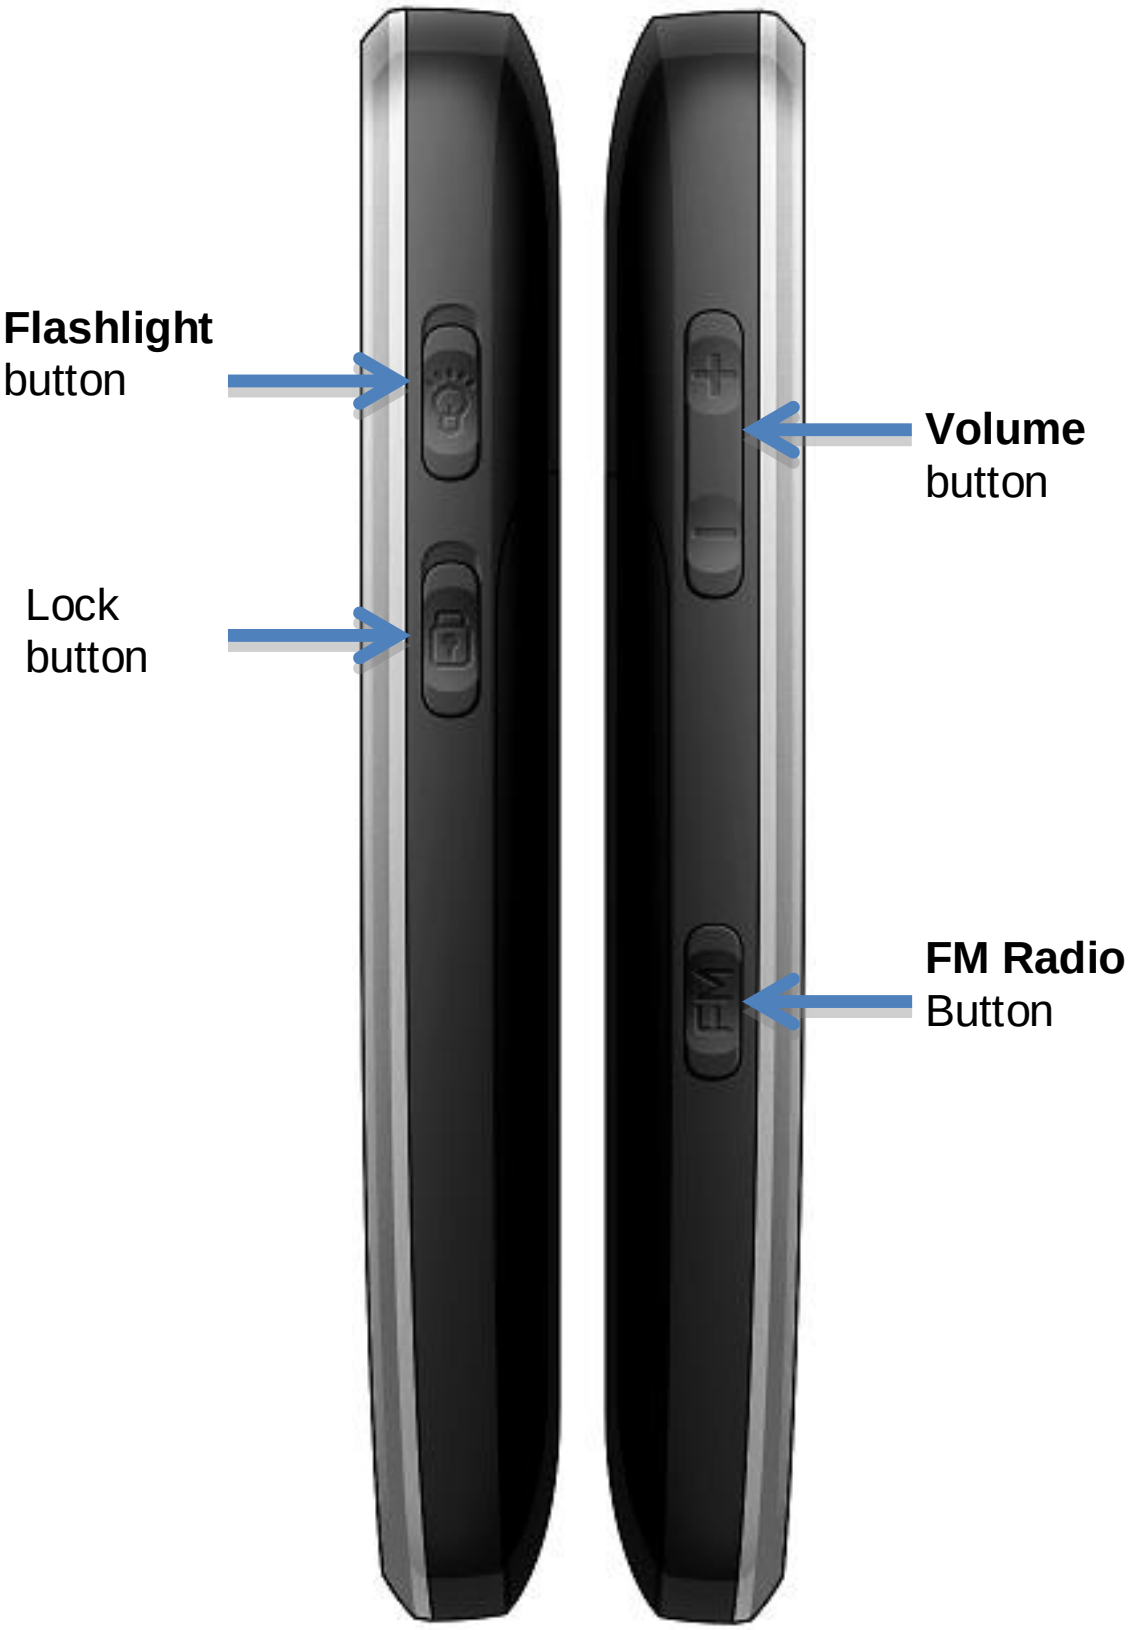
Flashlight button
Lock button
Volume button
FM Radio Button
FM

SOS
SOS
button

3.1.1 Buttons / Keys Illustrations

Buttons / Keys Illustrations	
	Right function key On Standby mode, access the calendar. On menu mode (Back to the top interface.)
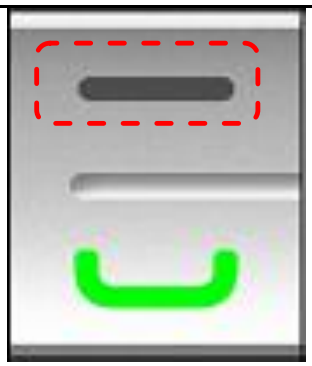	**Left Function key (OK)** On Standby mode, enter the menu information or acts as the "OK" button)
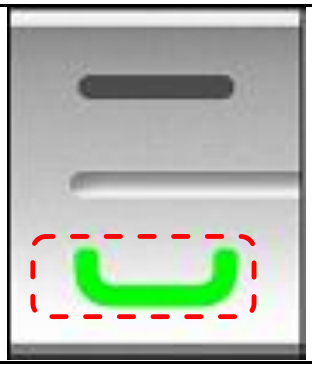	**Call key. Make and answer calls.** On Standby mode allows you to see and check all the call records.

	End of call Key. • Press and hold the button for 3 seconds to turn on or off the phone. • On call mode, disconnect the call.
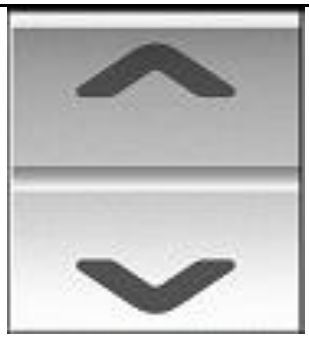	**Menu keys.** When pressed up or down select menu options.Teclas de Menú.
	Flashlight Button • To switch flashlight on, slide it up. • To turn flashlight off, slide down.
	S.O.S Button • To activate the SOS function, press the button for 4 seconds. • To turn off the SOS function, press the

	Lock button **Lock keypad:** Press the button up. **Un-lock the keypad:** Press the button down**.**
	Volume button has several functions: • Recall Mode, raises and lowers the volume (volume change) • In FM Radio and music player mode, volume up and down.
	FM Radio Button • To turn on the radio, press the button for 3 seconds.

4. Íconos on Screen

Signal strength

Lost call

 Tone

Keypad locked

tone + vibration

Headphones connected

vibration

alarm

silence

batería level

Roaming

New message

SIM Card

Charger Connected

Error SIM Card

Charger Disconnected

SOS calls

headphones connected

unlocked keypad

locked keypad

hands free connected

hands free disconnected

Error

incoming call

hot

question

OK

low level

Charging

Signal search

outgoing call

Lost call

Call ended

wait

Silence

5. Install and remove the SIM card

1) Turn off the phone: If it is on, turn it off by pressing the key for 5 seconds.

2) Remove the back cover: Remove the back cover by pushing down as shown in picture 3:

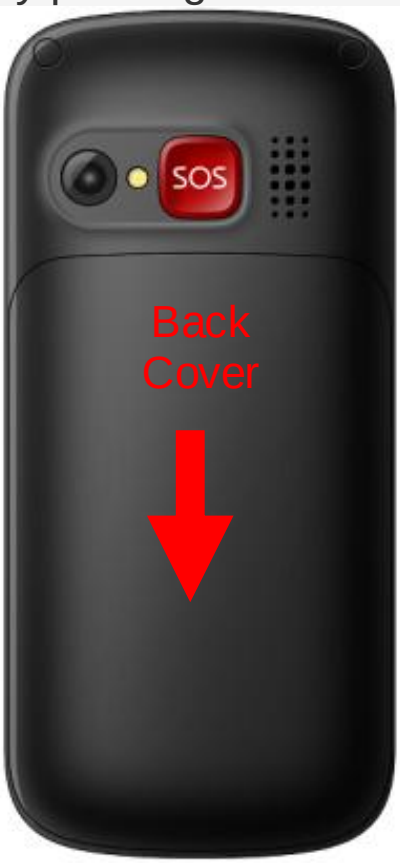

image 3

3) Insert the SIM card as shown in the following image 3-1 ensure that the metal part of the SIM card is facing downwards.

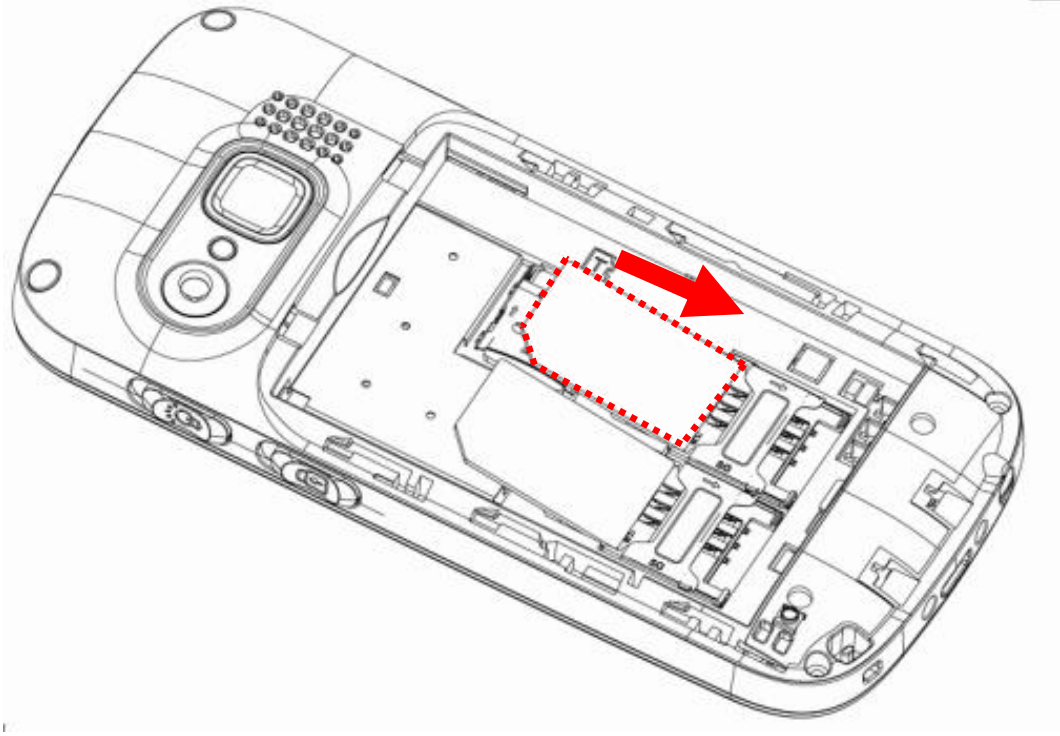

image 3-1

6. Battery and charger

6.1 Battery

This phone uses a battery type: Li-ion.

When using the phone for the first time, install the battery and charge the phone for 4 hours.
To install the battery follow these steps:

1) Remove the back cover: Remove the back cover by pushing down as shown in image 3-2:

image 3-2

2) Install the battery: battery metal points should be placed face to face with metal points inside the phone, then push the battery down until it is in place, as shown in image 3-3**.**

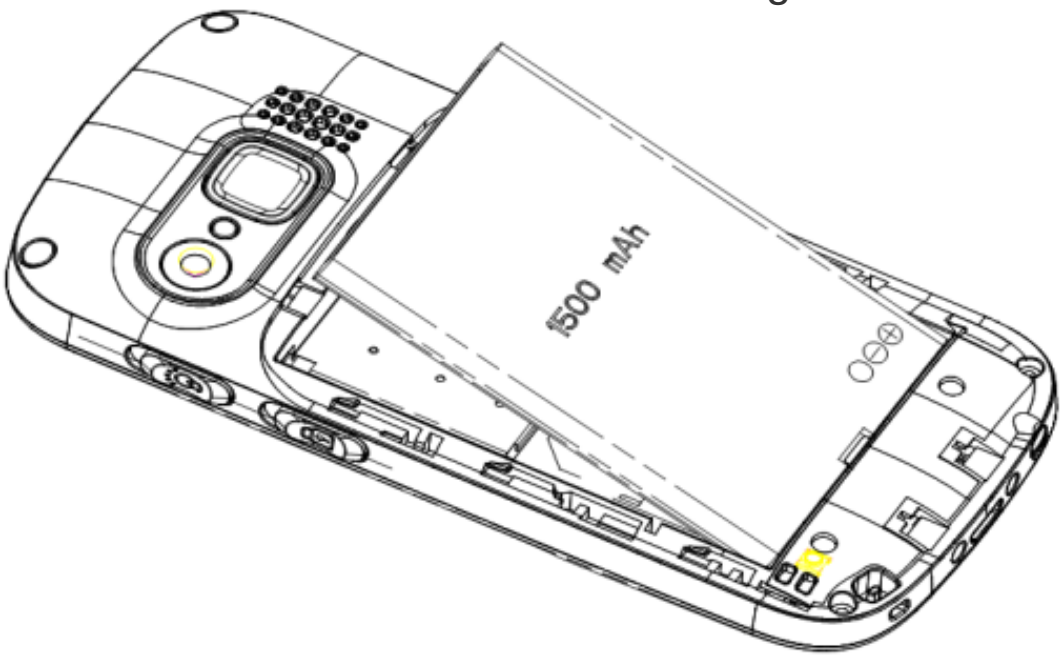

Image 3-3

NOTE: When the battery is low, this image is displayed: and a high -pitched beep warning signal sounds.

1.2 Use of the Charger

a) To charge the battery, connect the power adapter to the power outlet and then the wall outlet to the desktop charger, then place the phone in the desktop charger and as seen in image 3 - 4.

Image 3-4

b) You can also directly connect the wall adapter cable to your phone.

c) The battery charge indicator will be on during charging. If the phone is off while the charger is connected to the phone, only the battery charge indicator is displayed on the screen.

d) is displayed when the charging is complete.

Warning: While charging, place in a cool place between 0 ° C ~ 40 ° C. Use only batteries, chargers and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and will void the warranty.

7. Installing a MicroSD memory card

1) **Turn off the phone**: If it is on, turn it off by pressing the button for 5 seconds.

2) Remove the back cover: by pushing down as shown in image 3-5:

image 3-5

3) Insert the MicroSD card: Insert the MicroSD card as shown in picture 3-6

NOTES:
• The metal part should go upside down
• The phone can only handle cards up to **8GB.**

image 3-6

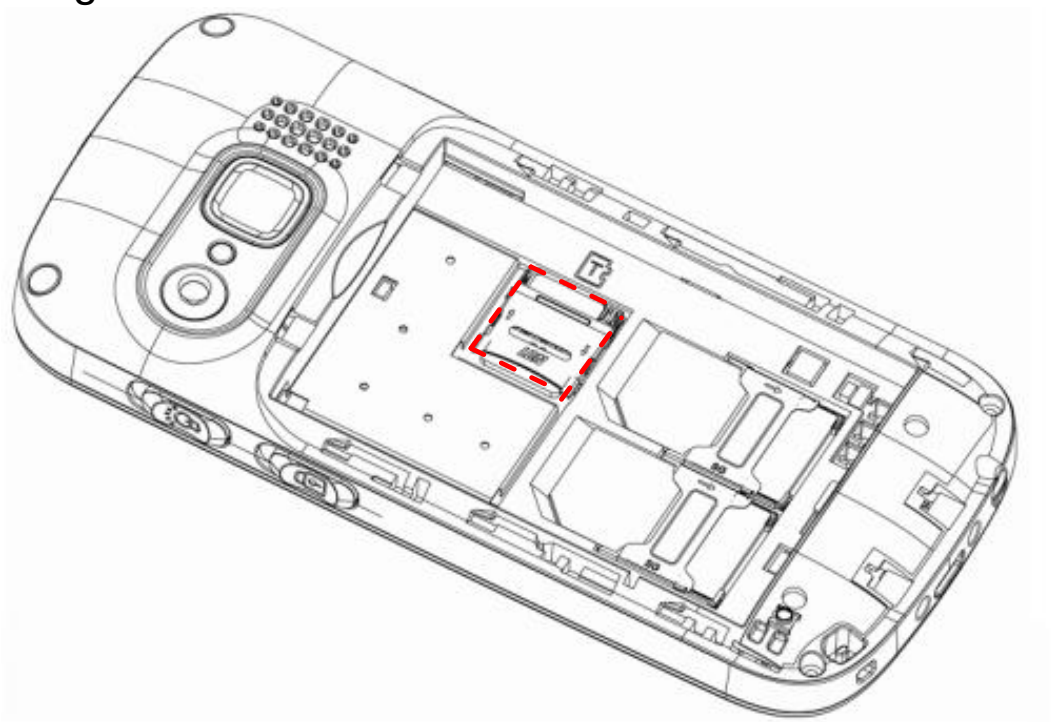

The MicroSD memory card acts as phone storage: The first time you insert the card, it is best to configure the music player, video player, video recorder, camera and sound recorder to store the information of these programs directly to the storage card you are installing.

To know how to set these options please refer to section **8.4 Multimedia Settings**

8 Getting Started

8.1 Turning the phone on and off

TURNING THE PHONE ON: If the phone is off, press the key for 5 seconds, if the SIM card is installed, the phone will request a PIN, enter the PIN and press the "OK" key . Once switched on, the phone will search for the wireless network connection automatically. Once connected to the cellular network, the service provider name will be displayed at the top of the screen. Now you can make and receive calls.

TURNING THE PHONE OFF: If the phone is on, press the key for three seconds or more until the phone turns off.

8.2 Making and receiving calls

8.2.1 Make call with keypad

When the phone is in standby, enter the desired number with the numeric keypad and press the key. After the call is answered, the call information is displayed on the screen.

To hang up press the key **twice**.

8.2.2 Call from the phonebook

1. In standby mode, press the **Menu** key down and look for "**Contacts**", or in standby mode, press the "**Right** function key" key.
2. Use the Menu keys to scroll through the phonebook, or quick search by pressing the corresponding letters of the name you are looking for .
3. To dial press .

8.2.3 Dial from recent calls

1. While in standby mode, press  and a list of recent calls is displayed.

2. Scroll to the desired number, and press  .

8.2.4 Receiving Calls

1. When you receive a call, the screen displays the caller's number and name if it has been included in the list of contacts. Press  to answer or press "Decline" to turn the ringer off and to reject the call (busy signal). You can also you can press to reject the call directly.

2. Press to end the call.

8.3 Run SOS function

ATTENTION: Must have previously configured the SOS options, please see paragraph 8.11 SOS options.

To activate the SOS Function press the SOS button

for 5 seconds.

An alarm will sound and the phone will send the predefined text message to the numbers you have registered in the SOS Function (see paragraph 8.11). After sending the message, the phone will automatically call those numbers and when the call is answered the phone will be in speakerphone mode. Once the call is answered (by a person or an answering machine) the phone will stop the function and will NOT continue to call.

NOTE: To stop the SOS function press the button.

8.4 Multimedia Configuration

Instructions on how to configure the MicroSD memory card options to listen to recorded music, watch videos, take photos and record videos with your phone:

STEPS:

1) Installing a MicroSD memory card of up to 8GB on the phone: Follow the instructions in **section 7**

Installing a MicroSD memory card of this user manual.
NOTE : Memory card not included with the phone so the user must provide one.

2) Turn on the phone and **follow the instructions** that will allow you to use the MicroSD card for storing music, photos and videos.

2.2) With the up or down menu key go to menu: Multimedia -> Image Viewer - > Options - > Storage around with the up / down menu key select " Memory Card" , press the "OK" key and then exit the menu by pressing the Red key .

2.3) With the up or down menu key , go to menu: Multimedia -> Audio Player -> then exit the menu by pressing the Red key .

2.4) With the up or down menu key 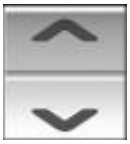 go to menu: Multimedia -> Video Player - > Options - > Storage with the up or down menu key , select " Memory Card" , press the key "OK" and then exit the menu by pressing the Red button .

3) Turn your computer on and once you have entered to your user session, connect the computer USB cable supplied with the product, then connect the USB cable to the phone.

NOTE : This procedure has only been tested with MicroFunction Windows XP operating systems or later versions .
If you need guidance on how to use a computer or MicroFunction Windows XP operating system or higher, please contact someone with experience in the use thereof.

4) The phone will display two options:

- Mass Storage
- COM Port

Choose "Mass Storage", then press the "OK " key.

5) Two storage units will be added to your computer: the first one from top to bottom corresponds to the MicroSD card installed in your phone and this is where you should store your files .

6) The following three folders must exist in the root of the MicroSD card:

. - **My Music**: In this folder you should put the music files you want to hear on the phone in MP3 format, if the music files are in another folder , the phone will NOT reproduce. NOTE: the phone only plays music files in MP3 and MDI format.

- **Videos**: This folder stores video files that are recorded with the phone and video files you wish to be played. NOTE: the phone only plays files in AVI and MP4 format.

- **Photos**: The photographs taken with the camera phone will be stored in this folder.

8.5 Use FM radio

1. While in standby mode, press the button for **4 seconds**

2. With the up or down menu key tune to the desired station.

3 Use the "+" and "-" volume key button to raise or lower the volume respectively.

4. To exit the FM radio, press the key.

8.6 Enable / Disable Music Player

1 With the up or down menu key go to menu: Multimedia -> Audio Player.

2. With the up or down menu key 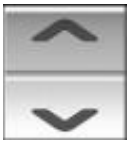 choose the song you want to hear.

3. Press **"5"** to play or pause music.
4 Use the "+" and "-" volume key button to raise or lower the volume respectively.

5. To exit the music player press the key**.**

8.7 Keypad Lock and Unlock

1. To **lock** the keypad, press up the key. Your phone will display the message: Locked keyboard and will display this image .

2. To **unlock** the keypad by pressing down the key.

8.8 Writing Text Message (SMS)

1. While in standby mode, press the Left Function Key , "Messages " .

2. Select "Write Message" and press "OK."

3. Choose "Text Messaging" and press "OK."

4. Enter your message using the keypad. For a list of special characters, press the asterisk key

, select the desired character with the Menu key and click "OK".

5. Once you finish the message, press the **Left** Function Key, "Options"**.**

6. Choose the option "Send to" and press "Select".

7. With the Menu key, choose " Enter Number " and enter the number you want to send the message to or, choose "Add from Contacts" and choose the contact you want to send the message to. Then press "OK". To add more recipients, repeat this step again.

8. Press the "Options" button.

9. With the Menu key, choose the "Send" option and press the "Select" button. Then the phone will send your message.

8.9 See text messages and multimedia messages

1. While in standby mode, press the Left Function Key , "Messages " .

2. Select "Inbox" and click "OK".

3. With the up and down menu key , view the list of received messages.

4. For a detailed content of a message, press "Options" and then "View".

5. To return to Standby mode, press the red button

8.10 Delete text messages

1. While in standby mode, press the Left Function Key , "Messages".

2. With the up or down menu key 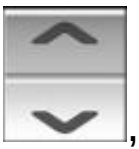 , choose "Inbox" or "Drafts" or "Outbox" or "Sent messages"

folder, whichever file you wish to delete the message from.
Then press "OK".

3. With the up or down menu key 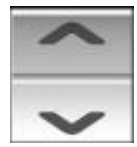 , choose the message you want to delete and press "Options" .

4. With the up or down menu key 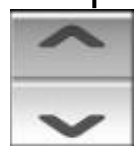 , choose "Delete." And with the Left Function Key , press "Select".

5. Press the Left Function Key "Yes."

8.11 Configure SOS

1. While in standby mode, press the Menu up or down key , and select "Settings", then press the Left Function Key , "OK." With the menu key , choose "Options SOS" and press 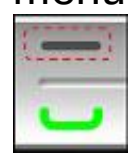 "OK."

2. To record or erase the numbers where the SOS message and call will be sent, choose the menu key 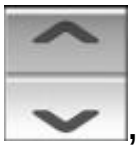 , the "SOS Numbers" option, and then press the "OK" button. Then with the menu button choose the options "Number 1" to "Number 5", type or delete the number, then press "Options" then choose "Save" and then press "Select" .

4. With the Menu key , choose "SOS message", Left Function Key "OK", type the SOS message you want and press "OK."

8.12 Disable / Enable reading incoming call number and pronunciation of numbers when you press the keypad.

8.12.1 Disable / Enable reading incoming call number

1. While in standby mode, press the up or down Menu key , and select "Settings" , then press the Left Function Key , "OK."

2. With the Menu key 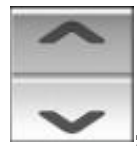 , choose "Read Incoming Number" and the Left function key press "OK", then the Menu key 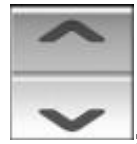 , choose " On" or "Off", then press "OK."

8.12.2 Pronunciation of numbers when you press the keypad

1. While in standby mode, press the up or down Menu Key , and select " Settings" , then press the Left Function Key , "OK."

2 . With the menu key, choose " User Profiles " and the Left function key press "OK" , then the Menu key 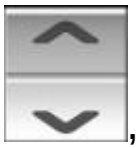 , choose " General" then press "Options" and " Customize" .

3. With the menu key 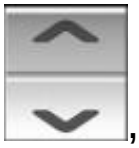 , choose " Custom" and press "Select" .

4. With the menu key select " Keypad " and press "Options " then choose " Change " and press "Select".

5. With the menu key , choose " Silent", "Click" or " Tone" and press "OK."

6. Then press "Options " and choose " Save" and press "Select".

8.13 Taking pictures

1. While in standby mode , press the up or down Menu key , and select " Video Camera", then press the Left Function Key , "OK." Then the camera is displayed and you can take pictures.

2. With the active camera press the "5" key to take pictures. Then press the Right function key to return to the camera.

3. Zoom in or out with the "4" and "6" keys.

4. With the Left Function Key can enter the setup menu of the camera to set different camera options and also to establish where the images are stored: whether the phone or the MicroSD memory card if one has been installed.

5. With the red key you can exit the camera.

8.14 View Photos

1. While in standby mode , press the up or down Menu key , and select " Multimedia" , then press the Left Function Key , "OK."

2. With Menu Key , select " Image Viewer " , and then press the Left Function Key "OK" , then "Options " and then "View " .

3. With the keys "4” and "6 " you may see the shots taken .

4. Exit with the Red key .

8.15 Record videos

1. While in standby mode , press the up or down Menu key , and select " Video Camera ", then press the Left Function Key , "OK." Then the camera is displayed.

2. With the menu key down select the icon , Video Camera .

3. With the camera active press the key "5" , to start recording a video, pause recording with the same "5" key and the Right

function key stops recording . Then press the Right function key to return to the camera.

3. Zoom in or out with the "4" and "6" keys.

4. With the Left Function Key enter the camera setup menu to set different camera options and further establish where videos are stored: whether the phone or the MicroSD memory card if one has been installed.

5. Exit with the red key .

8.16 View Videos

1. While in standby mode , press the Menu key and select " Multimedia" , then press the Left Function Key , "OK."

2.. Centre Menu Key 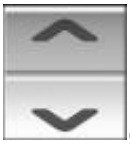 , choose " video player " , then press the Left Function Key , "OK."

3. With the Menu Key , you can see the list of recorded video .

4. To play a video, press the Left Function Key on desired video "Options ", then press "Select " button on the "Play " option.

5. The key "5" will play or pause the video.

4. Exit with the red key .

8.17 Set Date and Time

1. While in standby mode , press the up or down Menu key 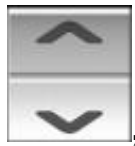 , and select " Settings" , then press the Left Function Key , "OK." With the menu key , choose " Phone" and press "OK."

2. Choose the "Time and Date " and press "OK."

3. Choose "Set Time / Date" and press "OK"

4. Enter the time in 24-hour format and the date format Year / Month / Day, then press "Save"

5. Once the time and date is set, you can choose whether to display the time in either 12 or 24 hours , for this choose "Set Format " and press the "OK" button , enter an option with the bullet "Time" to choose the desired format, press the keys "5" and "6" , then press the " OK " button.

6. Exit with the red key .

8.18 Change SIM PIN

1. While in standby mode, press the up or down Menu key and select " Settings" , then press the Left Function Key , "OK." With the menu key , choose " Security Settings " and press "OK."

2. Choose "Security SIM1 " or option "Security SIM2 " and press "OK."

3.. Choose the " PIN lock " option and press "On" or "Off", the phone will ask to enter the PIN , type it and click " OK "

4. Choose "Change PIN" and press "OK" , the phone will ask you to enter the current PIN first and then the new PIN twice.

5 . Then press "OK."

8.19 Access Calculator

1. While in standby mode , press the up or down Menu key , and select " Calculator" , then press the Left Function Key , "OK."

2. With the numeric keypad type the desired number and with the menu key 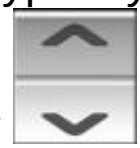 select the "+" " -", " x " and " ÷ ", then press "OK."

3. With the Right Function Key you can delete numbers and exit the calculator.

8.20 View Calendar and schedule events

1. While in standby mode, press the up or down Menu key , and select "Calendar", then press the Left Function Key , "OK."

2. With the menu key you will move up and down between calendar days and the volume key "+" and "- " can move left and right.

3. With the Left Function Key "Options" you can enter the Event Calendar and add new or delete existing ones.

8.21 Set Alarm

1. While in standby mode , press the up or down Menu key 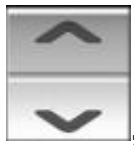 , and select " Alarm" , then press the Left Function Key , "OK."

2. You can set up to 5 different alarms. With the menu key you can move up and down between alarms.

3. Press the Left Function Key "Edit" on the desired alarm.

4. Move between the main options of the alarm with the Menu Key and with the volume key "4" and "6" choose the sub - options for each main option .

5. Once you have set the options and sub - options of the desired alarm, press the Right Function Key "Done " to save the alarm .

6. The phone will prompt you to save the alarm settings, press "Yes" or "No" as desired

8.22 Write Multimedia Message

Before posting a Multimedia Message (MMS), make sure you have done ALL the steps in section: **8.23 Set send and receive Multimedia Messages (MMS)**

1. While in standby mode, press the Left Function Key , "Messages".

2. Select "Write Message" and press "OK"

3. Choose "Multimedia Message" and press "OK."

4. Press "Options"

5. Choose "Add image" or "Add sound" or "Add Video", then press "OK"

6. Press "Select"

7. With the up or down menu key , select "Phone" or "Memory Card" and press "Open."

8. With the up or down menu key , select "Download", "My Music" or "Videos" and "Photos" and click "Open."

9. Menu up or down key 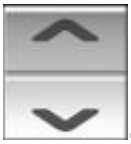 , and select the file you want to send and press "OK"

10. Press "Options"

11. Choose the option "Send to" and press "Select".

12. With the Menu key, choose "Enter Number" and enter the number you want to send the message to or, choose "Add from Contacts" and choose the contact to whom you want to send the message. Then press the "OK" button. To add more recipients, repeat this step again.

13. Press the "Options" button.

9. With the Menu key , choose the " Send" option and press the " Select" button. Then the phone will send your message.

8.23 Set send and receive Multimedia Messages (MMS)

This configuration must be performed by the technical staff of your telephone service provider, please go with this manual to a branch of your service provider or get help from your provider.

Furthermore, to send and receive multimedia messages, it is essential that:
a. Your telephone service provider has enabled this feature for your telephone line.
b. You have a MicroSD memory card installed on your phone.

Be sure to have the above before continuing with the setup.

CONFIGURATION STEPS for technical staff of the service provider:

. 1 With the up or down menu key 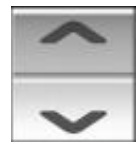 , enter in the phone's main menu, in the menu select: Settings -> Connectivity -> Data Accounts -> Options -> Add PS Account:

NOTE: Switch predictive keyboard to TAP with the "#" key

There you can configure the following options:
1. Account name
2. NPA (APN)
3. Username

4. Password
5. Auth Type (Normal, Safe). Choose with the "+" and "-" keys.
6. Advanced Settings
1. Homepage
2. Connection type (HTTP, WAP)
3. Use proxy (Yes, No)
4. Proxy address
5. Puerto proxy
6. Username
7. Password
8. Primary DNS
9. Secondary DNS
10. IP address
11. Subnet Mask
Press the "Done" button, then press "OK." Then exit the menu by pressing

2. With the up or down menu key 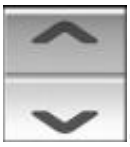 , enter the phone's main menu, in the menu choose: Messages - > Message settings -> Multimedia message -> Data account:

There select the data account you just created and press the "OK" button, then exit the menu by pressing .

9 Problem Solving

In order to avoid unnecessary calls to the service center and save time and money for a malfunctioning phone, please perform the following self- tests.

9.1 The mobile phone requests the "PIN code" when turned on

Verify that the PIN code is activated.
You must enter the PIN code of the SIM card. You can also disable the PIN verification code function.

9.2 The phone requests "Insert SIM card"

Check that the SIM card is in place.

9.3 The mobile phone asks "Please enter the lock code"

You set the phone lock.
You must enter the password to unlock the phone.

9.4 No Network

You may not have GSM network coverage

9.5 I cannot hear others but everybody else can hear me

Verify that the earpiece volume is not completely disabled. Make a phone call and while on the call, repeatedly press the "+" volume button

10 Phone does not recognize my MicroSD card or cannot read music, pictures or video stored on my MicroSD card

The following three folders must exist in the root of the MicroSD card:

. - **My Music**: In this folder you should put the music files you want to hear on the phone in MP3 format, if the music files are in another folder , the phone will NOT reproduce. NOTE: the phone only plays music files in MP3 and MDI format.

- **Videos**: This folder stores video files that are recorded with the phone and video files you wish to be played. NOTE: the phone only plays files in AVI and MP4 format.

- **Photos**: The photographs taken with the camera phone will be stored in this folder. (Make sure your MicroSD card is not greater than 4GB).

10.1 The phone does not turn on

If the phone is new and has never been used, make sure to perform ALL the steps in section 6 Battery and Charger
If the phone has already been used and it worked perfectly and now will not turn on. Charge for 4 hours to ensure that the battery is fully charged.

10.2 SOS function is not activated

Verify that the phone has a SIM card installed, While in standby mode, press the up or down Menu key 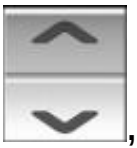 , and select "Settings" , then press the Left Function Key , "OK." With the menu key, choose "Options SOS" and press "OK"

Verify SOS numbers have registered.

11 Quick Troubleshooting Guide

To ensure a smooth operation of all our units, the point of sale or seller must provide the consumer (user) completely tested out-of-the-box unit and all the accessories.

UNIT DOES NOT CHARGE: The basic procedure is to rule out failures involving accessories which are: battery, charger and cable, verify that these are in good condition and test with new accessories.

No power: The first and main cause of this failure is the battery. Test the unit with a battery in good condition and fully charged. (Remember, the power button must be pressed for at least 3 seconds)

I cannot hear the person on the other side: In this case it is highly recommended to verify that the earpiece volume is in an appropriate intensity. Check using the buttons on the right side of the phone that the volume is not low if it is, press the button with the symbol (+) to increase .

NOTE: If for some reason your phone is misconfigured, restore manufacturer's basic default settings.

WARNING: THIS PROCEDURE WILL ERASE ALL DATA RECORDED ON PHONE INCLUDING PICTURES, MESSAGES, AND SOS CONFIGURATION. PERFORM THIS PROCEDURE AT YOUR OWN RISK; MAKE SURE YOU HAVE A BACKUP MADE OF ALL THE PHONE INFORMATION.

How do I do it?

1 - Go to settings, press (OK)
2 - Press the Number 12 (Restore Settings) , then press (OK)
3 - Enter the code 1122 and then press (OK) then select the option that says (YES) the phone will retake the original configuration, this may help you restore volume and sounds.